

# IMPORTANT SAFETY NOTICE

Ninja® BL660 Series Professional Blender  
Models BL660\*, BL663\*, and BL665\*

Sold between March 2012 and September 2015

## HAZARD

**LACERATION RISK IF CONSUMERS POUR FROM OR INVERT THE BLENDER'S PITCHER AFTER REMOVING THE LID, WITHOUT ALSO CAREFULLY REMOVING THE LOOSE STACKED BLADE ASSEMBLY FROM THE PITCHER**

Consumers should check their blender to determine if they have one of the above models. All potentially affected blenders show the model number on the rating label that is molded into the bottom of the motor base.

This recall does not require consumers to return their blenders. The recall is to provide consumers with revised instructions, advising that consumers should empty the blender's pitcher through the locked lid's pour spout, or, alternatively, by removing both the lid and the stacked blade assembly from the pitcher before pouring.



**If you have an affected blender, please visit  
[www.ninjurecall.com](http://www.ninjurecall.com) to download revised safety  
instructions, or call Ninja at:**

**1-877-593-5140**

**7:00 a.m. to 11:00 p.m. Eastern Time Monday – Saturday,  
and 9:00 a.m. to 8:00 p.m. Eastern Time Sunday**

\* BL660, BL660B, BL660C, BL660QCN, BL660QPL, BL660W, BL660WM, BL663,  
BL663CO, BL665QBK, BL665QCN, and BL665QWH



**RECALL NOTICE  
REVISED WARNINGS AND INSTRUCTIONS**

Re: **Revised Instructions for Ninja BL660 Series Professional Blenders in Recall to Warn of Laceration Risk**

Dear Valued Customer:

The reliability and safety of our products is of utmost importance to SharkNinja. In order to ensure the safety of our consumers, we, in cooperation with the U.S. Consumer Product Safety Commission and Health Canada, have revised the warning and safety instructions for Ninja® BL660 series professional blenders. The blender's stacked blade assembly poses a laceration risk if consumers pour from or invert the blender's pitcher after removing the lid, without also carefully removing the loose stacked blade assembly from the pitcher.

**This recall neither requires consumers to return their blenders nor for retailers to stop the sale of any units.** Rather, the purpose is to provide consumers with revised instructions, advising that consumers should empty the blender's pitcher through the locked lid's pour spout, or, alternatively, by removing both the lid and the stacked blade assembly from the pitcher before pouring.

Based on our records, you purchased affected products for resale. Enclosed are recall posters announcing the revised instructions. Please display these posters in a highly visible location within stores that sold the recalled models for a period of no less than 120 days. The revised instructions are enclosed and can also be obtained either by clicking on our website ([www.ninjurecall.com](http://www.ninjurecall.com)) or from a link in the joint news release with the U.S. Consumer Product Safety Commission and Health Canada.

SharkNinja is committed to ensuring that our products are safe and reliable by setting high standards for quality control and thoroughly investigating any reported issues.

We take seriously the trust you and our shared customers place in the quality of SharkNinja products. Please contact me at 617-243-0235 if you have any questions or comments. Thank you for your business and cooperation. This recall is in cooperation with the U.S. Consumer Product Safety Commission and Health Canada; they will monitor the effectiveness of this recall program.

 
Sincerely,

Neil Shah  
SVP Strategic Sales

Enclosure

# NINJA®

BL663C0  
OWNER'S GUIDE

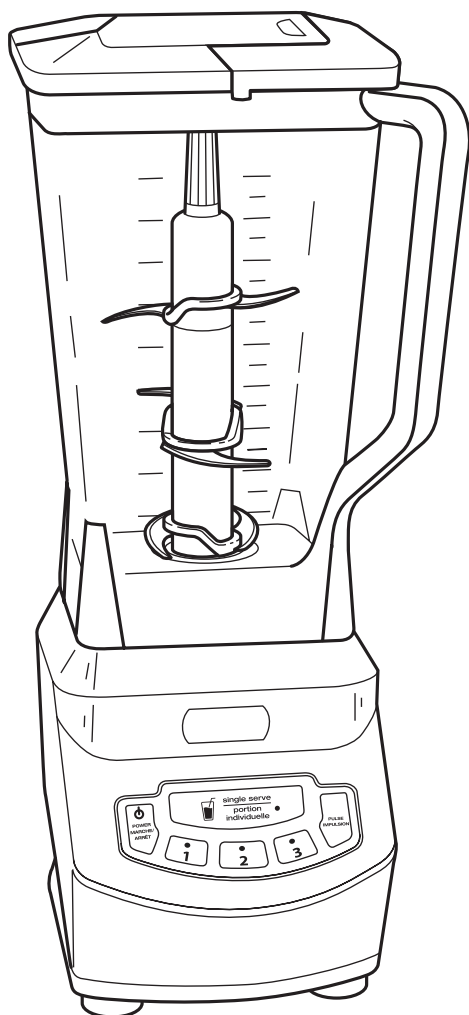

ninjakitchen.com  
1 877 646-5288

# IMPORTANT SAFETY INSTRUCTIONS

## For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER WITH NUTRI NINJA® CUPS.

### POLARIZED PLUG

**⚠ WARNING:** To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

**⚠ WARNING:** Extension cords are not recommended for use with this product.

### **⚠ WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 1 ⚠ WARNING:** Remove utensils prior to processing. Failure to remove may cause the jar to be damaged or to shatter which may cause personal injury.
- 2 ⚠ WARNING:** Stacked Blade Assembly is sharp, not locked in place and removable, handle with care. When handling the Stacked Blade Assembly, always hold it by the shaft. Failure to do so will result in a risk of laceration.
- 3 ⚠ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the pitcher. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first holding it by the shaft. Failure to do so will result in a risk of laceration.
- 4 ⚠ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- 5 ⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® cups.
- 6 ⚠ CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.
- 7** To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.

- 8 DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children. This is not a toy.
- 9** Never leave an appliance unattended when in use.
- 10** Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.
- 11** Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- 12 DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- 13 DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts. Return the appliance to SharkNinja Operating LLC for examination, repair or adjustment.
- 14 DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- 15** Always use appliance on a dry, level surface.
- 16** Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- 17** Avoid contact with moving parts.
- 18 DO NOT** attempt to sharpen blades.
- 19 DO NOT** use the appliance if blade assemblies are bent or damaged.
- 20** To reduce risk of injury, never place the blade assemblies on the base without the pitcher or Nutri Ninja® cup properly attached.
- 21 DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- 22** The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- 23 DO NOT** remove the container from the motor base while the appliance is in operation.
- 24** To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- 25 DO NOT** expose containers to extreme temperature changes.
- 26 DO NOT** overfill.
- 27 DO NOT** operate the appliance empty.
- 28** If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
- 29 THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- 30** The maximum rating is based on the Stacked Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

## SAVE THESE INSTRUCTIONS

Thank you for  
purchasing  
the Ninja®  
Professional  
Blender with  
Nutri Ninja™  
Cups.

Getting to Know Your Ninja Professional Blender with Nutri Ninja Cups .....	5
Before First Use .....	7
Assembly & Use of the Pitcher .....	8
Assembly & Use of the Nutri Ninja™ Cup .....	10
Care & Maintenance .....	11
Speed Chart .....	12
Troubleshooting Guide.....	12
Replacement Parts.....	12
Warranty & Registration.....	14

 
THIS BOOK COVERS MODEL NUMBER:  
BL663CO

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.  
Power: 1100 Watts  
Pitcher Capacity: 2.15 L (72 oz)  
MAX Liquid Capacity: 1.9 L (64 oz)  
Nutri Ninja Cup™ Capacity: 470 ml (16 oz)

## Getting To Know Your Ninja® Professional Blender with Nutri Ninja® Cups

The Ninja® Professional Blender with Nutri Ninja™ Cups is a high powered innovative tool with a compact design and outstanding performance. It is perfect for ice crushing, chopping, blending, and Nutrient and Vitamin Extraction\*.

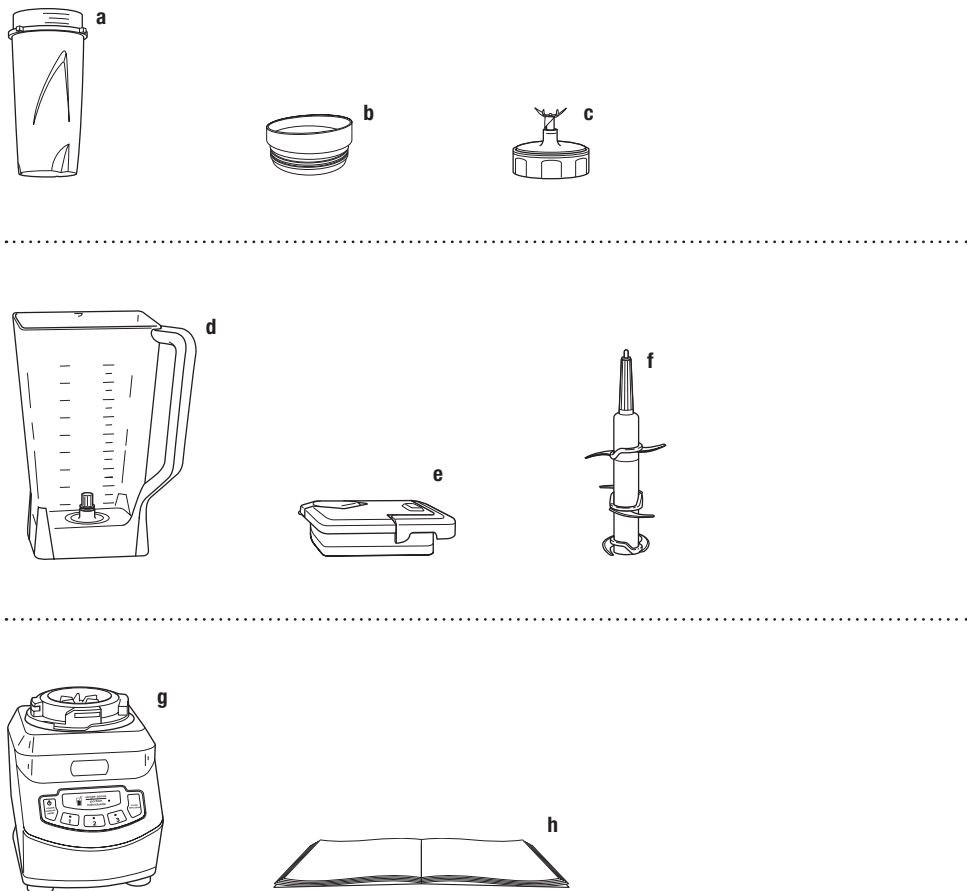

### FEATURES:

- Ninja Blade Technology
- 2.15 L Pitcher (MAX Liquid Capacity: 1.9 L) - BPA Free
- Nutri Ninja Cups - BPA Free
- Cord Storage
- Lock-On Lid, Featuring Pour Spout
- Easy-to-Clean Electronic Control Panel

\*Extract a drink containing vitamins and nutrients from fruits & vegetables

**PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:**

**IMPORTANT:** Make sure that the motor base is plugged in for use.

**IMPORTANT:** Never add ingredients into the container before placing the attachment in first.

 
**IMPORTANT:** Attachments are not interchangeable.

**IMPORTANT:** DO NOT attempt to operate the appliance without the lid on.


**IMPORTANT:** Never run the appliance empty.

**IMPORTANT:** Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

**⚠ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. Failure to do so will result in a risk of laceration.

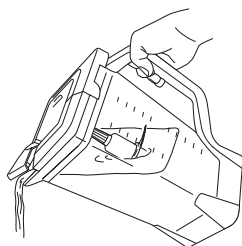

 **⚠ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first holding it by the shaft. Failure to do so will result in a risk of laceration.

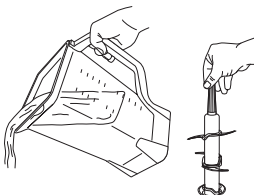

**⚠ CAUTION:** Do not immerse the motor base into water or any other liquid.

1 Remove all packaging material and labels from the appliance. Separate/remove all parts from each other.

2 Wash the lids, pitcher, Nutri Ninja cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades.

**⚠ WARNING:** Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp.

3 Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.

4 The pitcher, Nutri Ninja cups, lids, **Stacked Blade Assembly** and **Nutri Ninja Blade Assembly** are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.

5 Wipe the motor base clean with a damp cloth.

**Assembly & Use of the Pitcher**

**⚠ WARNING:** Handle the Stacked Blade Assembly with care, as the blades are sharp.

**⚠ WARNING:** Remove utensils prior to processing. Failure to remove may cause the pitcher to be damaged or to shatter, which may cause personal injury.

**⚠ WARNING:** Never leave the appliance unattended while in use.

**⚠ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.

**IMPORTANT:** Make sure that the motor base is plugged in for use.

**ASSEMBLY**

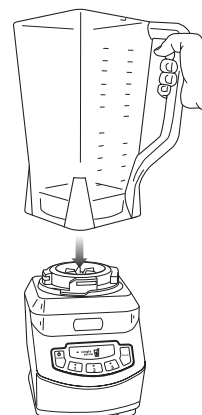 


Fig. 1



Fig. 2



Fig. 3a

OR

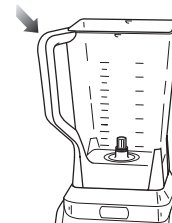 


Fig. 3b

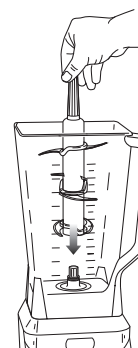 


Fig. 4

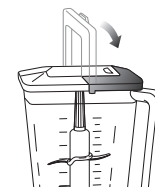 


Fig. 5



It's best to add the liquid ingredients first and then the dry ingredients.

1 Review warning and caution statements above before proceeding to number 2.

2 Place the motor base on a clean, dry, level surface such as a counter or table top.

3 Align and lower the pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.

4 Rotate the blender pitcher clockwise until it clicks in place. As the pitcher rotates, it will lower and the safety tabs on the bottom of the pitcher will slide under the safety tabs on the top of the motor base. (Fig. 2)

5 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)

6 Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright. (Fig. 4)

**NOTE:** The Stacked Blade Assembly will fit loosely on the drive gear.

7 Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.

**NOTE:** If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.

**NOTE:** When blending any kind of liquids, such as mixtures of any drinks or smoothies, do not exceed the "Max liquid" mark (64 oz.) on the pitcher.

8 Plug the power cord into the electrical outlet and press the power button (⏻).

**IMPORTANT:** As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.

9 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (↗) located on the lid with the arrow (↖) located on the pitcher's handle. (Fig. 5)



## Assembly and Use for the Pitcher - cont.

- ⚠ **WARNING:** Handle the Stacked Blade Assembly with care, as the blades are sharp.
- ⚠ **WARNING:** Remove utensils prior to processing. Failure to remove may cause the pitcher to be damaged or to shatter, which may cause personal injury.
- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- IMPORTANT:** Make sure that the motor base is plugged in for use.

### USE

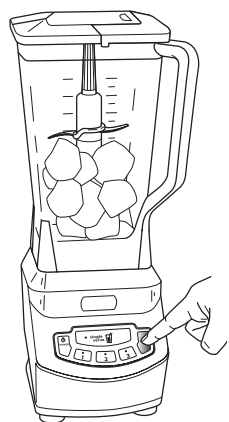 


Fig. 6

### REMOVAL

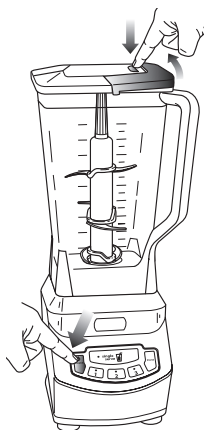 


Fig. 7

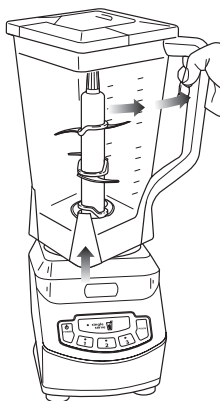 


Fig. 8

- 10 Select the speed that best suits your needs. (Fig. 6)  
**NOTE:** Pulse ingredients for even chopping by pressing down in short intervals.
- 11 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Stacked Blade Assembly to stop turning. (Fig. 7)
- 12 To remove the lid, pull the lid handle up to a 90° angle. Turn the blender pitcher counter-clockwise to lift off the base. (Fig. 7, Fig. 8)

- ⚠ **WARNING:** Never insert your hands in the pitcher as the Stacked Blade Assembly is sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

- 13 Open the pour spout cap and use the spout to empty liquid contents.
- 14 For thicker consistencies, first remove the lid by pressing the release button and pulling the lid handle up to a 90 degree angle to lift lid off the pitcher. Then, carefully remove the Stacked Blade Assembly by the top of the shaft. Place Stacked Blade Assembly away from the work area to avoid accidental contact. Finally, empty contents from the pitcher.
- 15 Make sure that the unit is unplugged when not in use.

## Use of the Nutri Ninja® Cup

- ⚠ **WARNING:** Handle the Nutri Ninja Blade Assembly with care, as the blades are sharp.
- ⚠ **WARNING:** Remove utensils prior to processing. Failure to remove may cause the Nutri Ninja cup to be damaged or to shatter, which may cause personal injury.
- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- ⚠ **CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.

### ASSEMBLY

 


Fig. 1

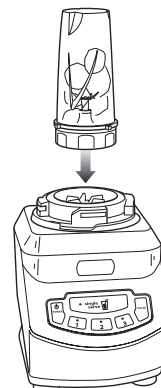 


Fig. 2

### USE

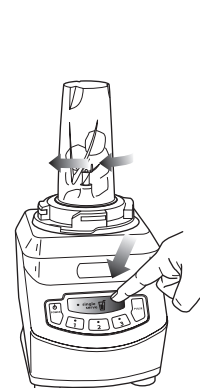 


Fig. 3

### REMOVAL

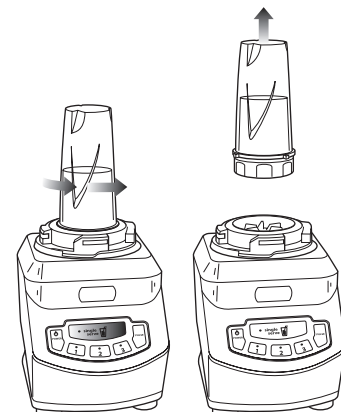 


Fig. 4

Fig. 5

💡 For best results, use short **"PULSES"**... Practice makes perfect!!

- 1 Review warning and caution statements above before proceeding to number 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 3 Add ingredients to the Nutri Ninja cup.
- 4 Place the Nutri Ninja Blade Assembly onto the cup and screw it tightly until you have a good seal. (Fig. 1)
- 5 Turn the Nutri Ninja cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the Nutri Ninja cup clockwise to lock into place. You will hear a click when the lock is engaged. (Fig. 2)
- 6 Press down on the Single Serve button in short intervals to activate. (Fig. 3)

- 7 When you have reached your desired consistency, stop the appliance by removing your hand from the Single Serve button. To remove the Nutri Ninja cup turn it counter-clockwise (Fig. 4) and pull straight up to remove. (Fig. 5)  
**NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the "Max" fill line.
- 8 Turn the cup upright and remove the Nutri Ninja Blade Assembly by twisting the blade assembly to the left.
- 9 Place the To-Go lid onto the Nutri Ninja cup, twist to seal and enjoy!
- 10 Make sure that the motor base is unplugged when not in use.



Care & Maintenance

HOW TO CLEAN

- CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

**CAUTION:** DO NOT immerse the motor base into water or any other liquid.
- 1 Separate/remove all parts from each other.

2 Hand Washing: Wash the lids, pitcher, Nutri Ninja™ cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.

**WARNING:** Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

 
3 Dishwasher: The pitcher, Nutri Ninja cups, lids, Stacked Blade Assembly and Nutri Ninja Blade Assembly are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.

4 Wipe the motor base clean with a damp cloth.

Please call customer service if any servicing needs to be performed on the appliance at 1-877-646-5288.

HOW TO STORE

- 1 Store the Ninja® Professional Blender upright with the pitcher on the motor base, Stacked Blade Assembly inside the pitcher and lid locked on the pitcher. Do not place anything on top. Store the Nutri Ninja Blade Assembly attached to the Nutri Ninja cup and the rest of the attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard. Insert the power cord into the cord storage area located in the back of the motor base.

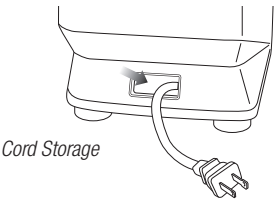

RESETTING THE MOTOR THERMOSTAT

The Ninja Professional Blender features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. **If the appliance is being overloaded, the motor will stop. Allow the appliance to cool for approximately 15 minutes.** To reset the appliance, follow the resetting procedure below:

1 Unplug the appliance from the electrical outlet.

2 Remove and empty the container and ensure that no food is jamming the blade assemblies.

3 Allow the appliance to cool for approximately 15 minutes.

4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.

5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

Speed Chart

BUTTON	FUNCTION	USE
POWER	On/Off	Always turn appliance 'Off' when not in use.
1	Processing & Mixing	Use to mix thin batters, gravies and marinades, scramble eggs, puree cooked foods and uncooked fruits and chop vegetables for dips and salsa.
2	Blending	Use to grate hard cheeses, cream soups*, beat dips, grind nuts, thorough chopping, blend sauces* and spreads. Blend mixed drinks, powdered drinks or milk shakes.
3	Pureeing, Liquefying & Ice Crushing	Use to mix smoothies, frappes, liquefy thick mixtures and blend whole fruits and vegetables. Crush ice cubes for snow cones, chilled beverages or frozen slushes.
PULSE	Controlled Processing & Bursts of Power	Use to control chopping and processing.
SINGLE SERVE	Blending in Nutri Ninja® Cup	Use to mix smoothies, fozen drinks, sauces* or dressings.

**IMPORTANT:** Do not run the appliance over 4 minutes at a time to prevent overheating of the appliance.

\* When blending sauces and soups, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Control Panel Lights Are Blinking, Motor Doesn't Start or Blade Assembly Doesn't Rotate.	Make sure the pitcher is securely placed on motor base. Make sure the lid is securely on pitcher in the correct position (align arrows). The blender is turned 'Off'. Press the power button () to turn 'On'. Check that the plug is securely inserted into the electrical outlet. Check the fuse or circuit breaker. The unit has overheated. Unplug and wait approximately 15 minutes before using again.
Food is Unevenly Chopped.	Either you are chopping too much food at one time, you are chopping food with different textures or the pieces are not of even size. Process smaller amounts per batch.
Food is Chopped Too Fine or is Too Watery.	The food has been over processed. Use pulse button for controlled processing.
Food Collects on the Lid or on the Sides of the Pitcher.	The mixture is too thick. Add more liquid.
You Cannot Achieve Snow From Solid Ice.	Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.

Replacement Parts

To order additional parts and accessories, please visit our website: [ninjakitchen.com](http://ninjakitchen.com) or feel free to contact customer service: 1-877-646-5288.

**SharkNinja Operating LLC** warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-877-646-5288 or visit our website [ninjakitchen.com](http://ninjakitchen.com).

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **SharkNinja Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is **SharkNinja Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

**\*IMPORTANT:** Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

SharkNinja Operating LLC  
US: Newton, MA 02459  
CAN: Ville St-Laurent, QC H4S 1A7  
**1-877-646-5288**  
**ninjakitchen.com**

**Ninja** is a registered trademark of SharkNinja Operating LLC.

**Nutri Ninja** is a trademark of SharkNinja Operating LLC.

**Ninja** est une marques déposée de SharkNinja Operating LLC.

**Nutri Ninja** est une marque de commerce de SharkNinja Operating LLC.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

Les illustrations peuvent différer du produit réel. Nous nous efforçons sans cesse d'améliorer nos produits et, de ce fait, les spécifications décrites dans ce guide sont sujettes à des changements sans préavis.

For SharkNinja U.S. Patent information visit [sharkninja.com/USPatents](http://sharkninja.com/USPatents).

Pour des renseignements sur les brevets de SharkNinja aux É.-U., veuillez visiter [sharkninja.com/USPatents](http://sharkninja.com/USPatents).

© 2015 SharkNinja Operating LLC  
BL663C0\_30\_E\_IB\_151106\_2  
PRINTED IN CHINA / IMPRIMÉ EN CHINE


Please make sure to read your Ninja Owner's Guide in addition to this instruction sheet.

# NINJA® STACKED BLADE ASSEMBLY

 
## ASSEMBLY



- 1.**  
Place pitcher on base and turn clockwise to lock in place.

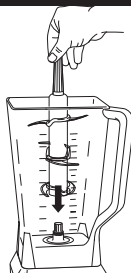

 - 2.**  
Holding the blade assembly by the top of the shaft, insert it into the pitcher.

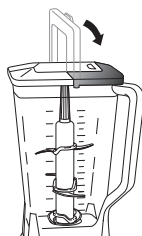


- 3.**  
Align arrows on lid and handle, then lower handle to lock in place.




**WARNING:** Blades are sharp and not locked in place. Make sure lid is locked onto the pitcher before pouring. If pouring without lid, ALWAYS remove blades first. Failure to do so will result in a laceration risk. Refer to the Ninja Owner's Guide for additional information.

 
**▲ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. Failure to do so will result in a risk of laceration.

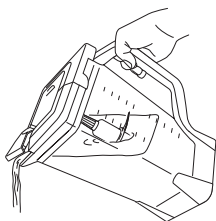

 **▲ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first holding it by the shaft. Failure to do so will result in a risk of laceration.

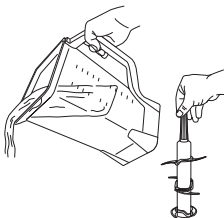

## CLEANING

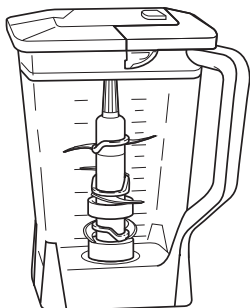 

**Hand washing:** Wash the lid, pitcher and blade assembly in warm, soapy water. When washing the blade assembly, use a dish washing utensil with a handle to avoid direct hand contact with blades. Handle blade assembly with care to avoid contact with sharp edges, rinse and air dry thoroughly.

**▲ WARNING:** Handle the Stacked Blade Assembly with care when washing, as the blades are sharp. Contact with the blade's edge can result in laceration.

**Dishwasher:** The pitcher, lid and Stacked Blade Assembly are all dishwasher safe. It is recommended that the lid and blade assembly be placed on the top rack. Ensure that the blade assembly is removed from the pitcher before placing in the dishwasher.




# JEU DE LAMES SUPERPOSÉES

 
## ASSEMBLAGE



**1.**  
Placez le mélangeur sur la base et en le tournant dans le sens horaire pour le verrouiller en place.

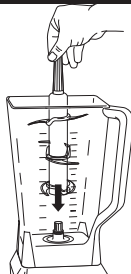

 **2.**  
Insérez le jeu de lames superposées dans le pichet en tenant la tige par le bout.

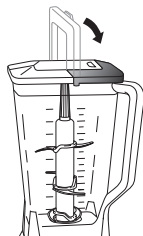

**3.**  
Alignez les flèches sur le couvercle et la poignée, puis abaissez la poignée pour verrouiller en place.

 


**AVERTISSEMENT :** Les lames sont tranchantes et ne sont pas verrouillées en place. Vérifiez que le couvercle est fixé au pichet avant de verser. Si vous versez sans le couvercle, enlevez **TOUJOURS** les lames avant de le faire. Ne pas procéder de la sorte augmente le risque de laceration. Consultez le guide d'utilisateur du mélangeur Ninja pour obtenir de plus amples renseignements.


**⚠ AVERTISSEMENT :** Les lames superposées sont coupantes et la tige n'est pas verrouillée en place. Si vous versez du bec verseur, assurez-vous que le couvercle est bien verrouillé en place sur le pichet-mélangeur. Ne pas procéder de la sorte augmente le risque de laceration.



**⚠ AVERTISSEMENT :** Les lames superposées sont coupantes et la tige n'est pas verrouillée en place. Pour verser sans le couvercle, retirez d'abord le jeu de lames superposées avec précaution, en le tenant par la tige. Ne pas procéder de la sorte augmente le risque de laceration.

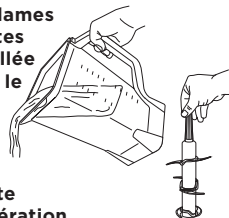

## NETTOYAGE

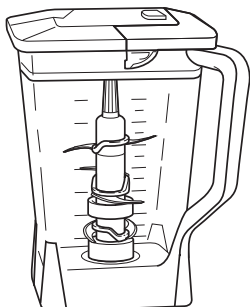 


**Nettoyage à la main :** Lavez les couvercles, le pichet et le jeu de lames à l'eau savonneuse tiède. Lavez le jeu de lames avec une brosse à vaisselle munie d'une poignée pour éviter tout contact direct avec les lames. Manipulez le jeu de lames avec soin pour éviter tout contact avec des bords tranchants, rincez-le et laissez-le sécher entièrement.

**⚠ AVERTISSEMENT :** Le jeu de lames superposées est coupant; manipulez-le avec soin lorsque vous le lavez. Le contact avec les lames peut causer des lacerations.

**Lave-vaisselle :** Le pichet, le couvercle et le jeu de lames superposées peuvent être mis au lave-vaisselle. Nous vous recommandons de placer le couvercle et le jeu de lames dans le panier supérieur. Retirez le jeu de lames du pichet avant de le mettre au lave-vaisselle.

## PITCHER WRAP

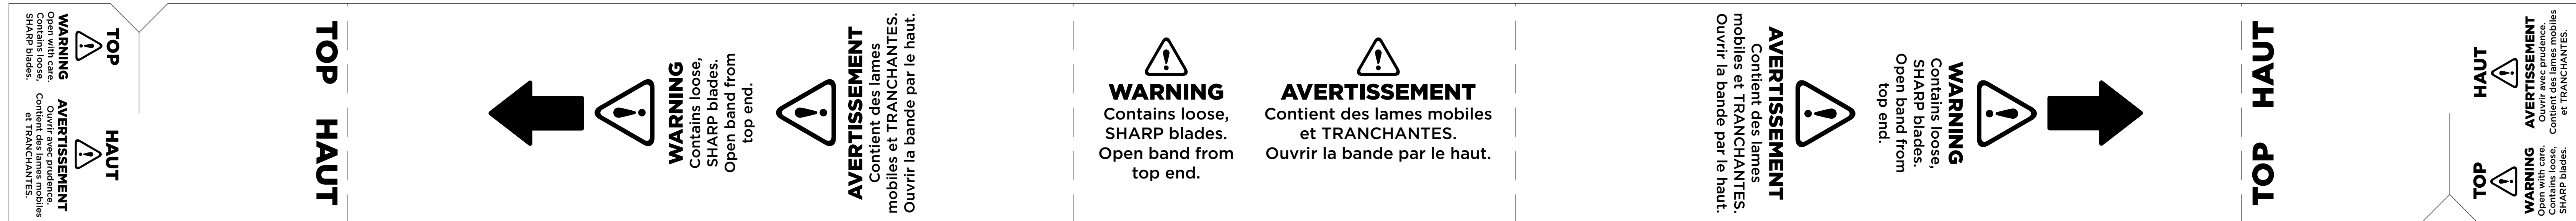 

## PITCHER INSERT

